



SERIES 4: PORCH ROOF TO POST BRACKET ASSEMBLY GUIDE

Structural Deck Support System: Product Number: H4-GPR

STEP 1: Notch 6x6 post to accommodate beam and rim joist widths. For LVL's, width is 2.5". For 2X lumber, width is 4".

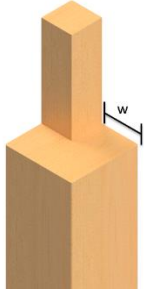

STEP 2: Nail frame typically. For this example, 2X material is used for beam and rim joist.

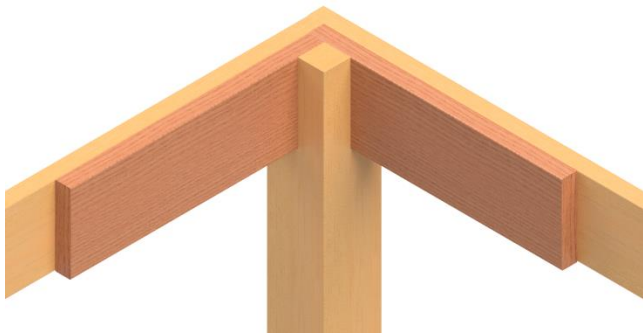


STEP 3: Use 10 screws to fasten the porch roof bracket to frame.



STEP 4: Finished view. Installation Complete!



Cut view to illustrate use with other post brackets.

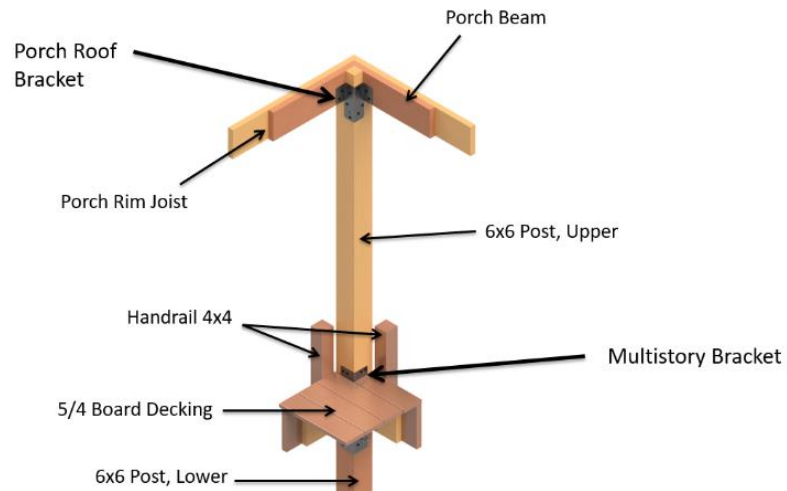

FOR ILLUSTRATED PURPOSES ONLY: SEE ADDITIONAL GUIDELINES PER DECK DESIGN PROFESSIONAL & LOCAL CODE AUTHORITY. INSTALLER IS RESPONSIBLE FOR PREVENTING WATER INTRUSION. TIGHTEN ALL BOLTS & SEAL ALL CAULK. FASTENERS MUST MEET OR EXCEED LOCAL CODE (REC: HDG ASTM 123 HOT DIPPED GALVANIZED OR STAINLESS STEEL) INSTALL ONLY IN PROVIDED, SPECIFIED HOLES. SEE HDGEP.COM FOR SPECS/VIDEOS